

DUCAR

Diagramme de pièces *Parts diagram*




Le modèle peut différer légèrement de la photo / *The model may differ slightly from the picture*

DG4950 Génératrice *Generator*

MTI
CANADA

DG4950

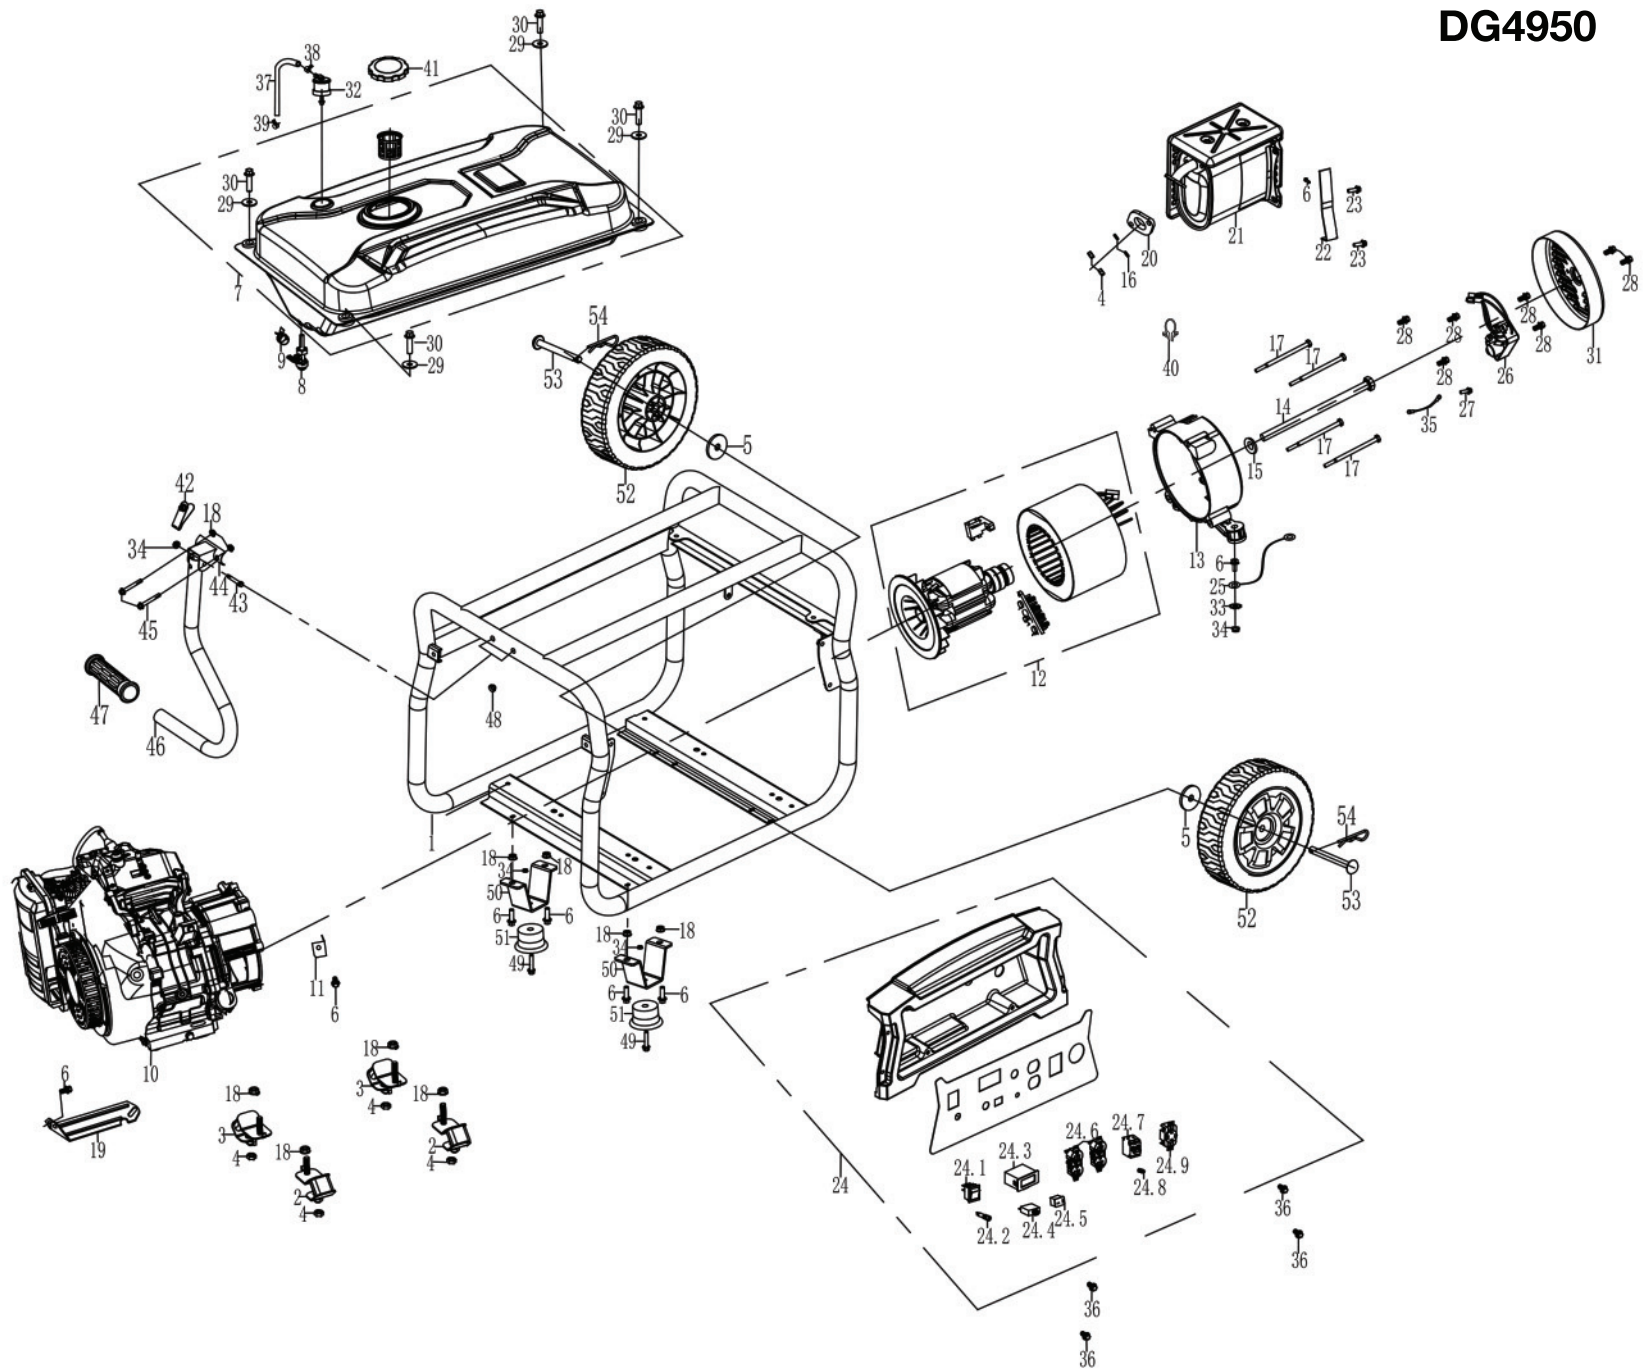

Spare parts for the DG4950 generator			
NO.	Code	Description	Quantity
1	773449-010	FRAME	1
2	531201	ISOLATOR A	2
3	531204	ISOLATOR B	2
4	90011	NUT M8	6
5	96813	FLAT WASHER	2
6	91325	BOLT M6X12	8
7	700332-026	FUEL TANK	1
8	518207	FUEL COCK	1
9	94403	CLIP,FUEL LINE	1
10	110022510040	ENGINE ASSY DH225	1
11	549201	DUSTPROOF SHEET	1
12	753802	STARTING MOTOR ASSEMBLY	1
13	532105	MOTOR STAND	1
14	91711	BOLT M8*1*230	1
15	96812	GASKET, ROTOR BOLT	1
16	94206	SPRING WASHER	2
17	91611	BOLT M6*175	4
18	90018	NUT M8	10
19	540201	BRACKET,AIR CLEANER	1
20	96055	PACKING,EXHAUST	1
21	705363	MUFFLER COMP	1
22	520302	MUFFLER BRACKET	1
23	91343	BOLT M8X16	2
24	714730	PANEL COMP	1
24,1	6234	SWITCH ASSEMBLY	1
24,2	6237	OIL ALARM LAMP	1
24,3	6041	TIME ACCUMULATOR	1
24,4	6233	THERMAL PROTECTOR	1
24,5	6205	DC T-RECEPTACLE	1
24,6	6032	AMERICAN DOUBLE SOCKET	2
24,7	6434-17	CIRCUIT BREAKER	1
24,8	6235	GROUNDING TERMINAL COMPONENT	1
24,9	6241	AMERICAN FOUR-HOLE ANTI-TRIP SOCKET	1
25	544301	FRAME WIRE	1
26	534105	AUTOMATIC VOLTAGE REGULATOR	1
27	91323	BOLT M5X16	1
28	91322	BOLT M5X12	7
29	96811	WASHER, FUEL TANK	4
30	91306	BOLT M6X25	4
31	533104-026	END COVER,GENERATOR	1
32	245405	MANUAL CHOKE ASSEMBLY	1
33	94002	BEARING Φ 6	1

34	90016	NUT M6	4
35	544304	DAPUTY HARNESS	1
36	91329	BOLT M6X16	4
37	95318	CONNECTING PIPE	1
38	94408	CLIP,FUEL LINE	1
39	94409	CLIP,FUEL LINE	1
40	210801	CLIP	1
41	519413	THE CAP	1
42	527501	HANDLE CLIP	1
43	91350	BOLT M8X45	1
44	528304-010	CONNECTOR, HANDLE	1
45	91349	BOLT M8X40	2
46	526310-010	HANDLE ASSY	1
47	528602	RUBBER,HANDLE	1
48	527401	HANDLEBAR RUBBER CUSHION	1
49	91308	BOLT M6X28	2
50	525309-010	SUPPORT,FRAME	2
51	531115	CUSHIONING PADS	2
52	523619	WHEEL	2
53	524304	AXLE	2
54	548302	CHECK BACK PIN	2