

# DUCAR

## Diagramme de pièces *Parts diagram*




Le modèle peut différer légèrement de la photo / *The model may differ slightly from the picture*

# DG3500

## Génératrice *Generator*

**MTI**  
CANADA

# DG3500

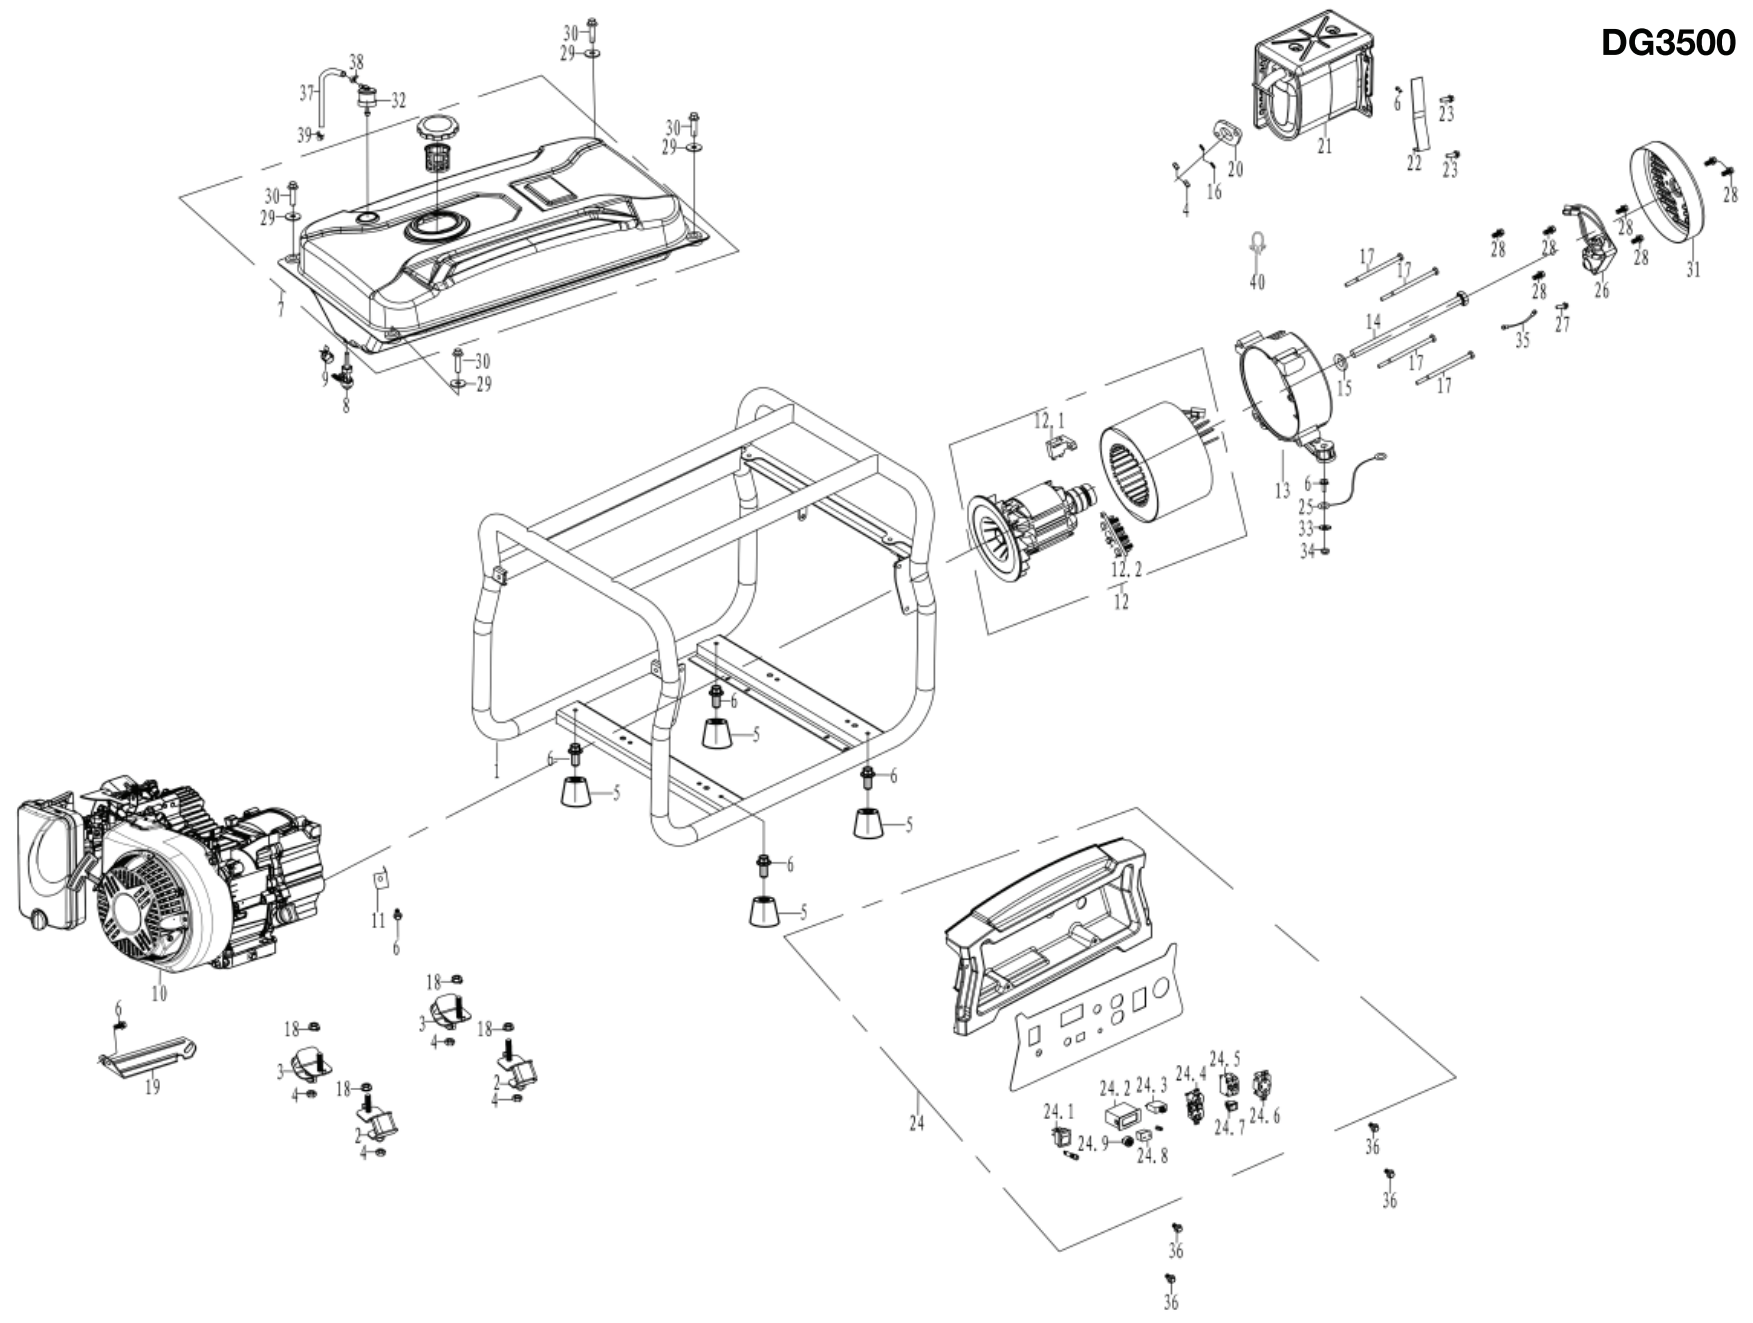

Spare parts for the DG3500 generator			
NO.	Code	Description	quantity
1	773428-010	FRAME	1
2	531201	ISOLATOR A	2
3	531204	ISOLATOR B	2
4	90011	NUT M8	6
5	531112		4
6	91325	BOLT M6X12	8
7	700215-026	FUEL TANK	1
8	518201	FUEL COCK	1
9	94403	CLIP,FUEL LINE	1
10	110021210019	ENGINE ASSY	1
11	549201	DUSTPROOF SHEET	1
12	752829	STARTING MOTOR ASSEMBLY	1
12,1	599012	CARBON BRUSH COMP	1
12,2	599919	GROUNDING POST COMP	1
13	532105	MOTOR STAND	1
14	91708	BOLT	1
15	96812	GASKET, ROTOR BOLT	1
16	94206	SPRING WASHER	2
17	91608	BOLT	4
18	90018	NUT M8	4
19	540201	BRACKET,AIR CLEANER	1
20	96055	PACKING,EXHAUST	1
21	705324	MUFFLER COMP	1
22	520302	MUFFLER BRACKET	1
23	91343	BOLT M8X16	2
24	713458	PANEL COMP	1
24..1	6234	SWITCH ASSEMBLY	1
24,2	6041	TIME ACCUMULATOR	1
24,3	599919	THERMAL PROTECTOR 8A/CSA	1
24,4	6204	DOUBLE RECEPTACLE,AMERICA	1
24,5	6264	CIRCUIT BREAKER 12A/1P/30 CSA	1
24,6	6241		1
24,7	34202-001	CHANGE-OVER SWITCH	1
24,8	34204-035	DC T-RECEPTACLE	1
24,9	599923	THERMAL PROTECTOR 20A/CSA	1
25	544301	FRAME WIRE	1
26	534101	AUTOMATIC VOLTAGE REGULATOR	1
27	91323	BOLT M5X16	1
28	91322	BOLT M5X12	7
29	96811	WASHER. FUEL TANK	4
30	91306	BOLT M6X25	4
31	533104-026	END COVER,GENERATOR	1
32	245405	MANUAL CHOKE ASSEMBLY	1
33	94002	BEARING Φ6	1
34	90016	NUT M6	1
35	544304	DAPUTY HARNESS	1
36	91329	BOLT M6X16	4
37	95318	CONNECTING PIPE	1
38	94408	CLIP,FUEL LINE	1
39	94409	CLIP,FUEL LINE	1
40	210801	CLIP	1